

User Manual

Portable Oil Vapour Monitor

Model: PUR1



Table of Contents

- Notices & Warnings 3

- Introduction 5**
 - Oil Vapour Monitor 6
 - Specifications 7
 - Oil Vapour Monitor Kit 10

- Installation 11**
 - Installation Overview 12
 - Installation – Mechanical 13
 - Installation – Electrical..... 15

- Operation 17**
 - Functions 18
 - Measurement Process 19
 - LED Indicator 20
 - Operation..... 21
 - Turning Off the Unit 26

- Warranty 27**
 - Warranty 28
 - Calibration 28

Notices & Warnings

Notices

Please read all of this manual before you install, operate or maintain this product. Pay attention to notes, warnings and instructions. The manufacturer cannot be held liable for any damage which occurs as a result of noncompliance with this manual.

Do not tamper with product. Should the product be tampered with in any manner other than a procedure which is described and specified in this manual, the warranty is cancelled and the manufacturer is exempt from liability.

The product is designed exclusively for the application described in this manual. Use of this product in conditions not specified in this manual or, contrary to the instructions provided by the manufacturer, is considered improper handling (mishandling) of the product and will void the warranty. The manufacturer will not be held liable for any damages resulting from improper use or mishandling of the product.

This manual should be read carefully by relevant personnel and the end user. This manual should be kept with the product and be made available as needed. **Once you install or use the product, you accept that you have read, understood and complied with this manual.**

CAA Sensors endeavours to make the content of this manual correct but is not

responsible for omissions or errors and the consequences caused. In case of any doubts or questions regarding this manual or the product, please contact CAA Sensors.



Warnings

Ignoring warnings can lead to serious injury and/or cause damage!

When handling, operating or carrying out maintenance on this product, personnel must employ safe working practices and observe all local health & safety requirements and regulations.

Improper operation or maintenance of this product could be dangerous and result in an accident causing damage to machinery or injury or death.

The manufacturer cannot anticipate every possible circumstance which may represent a potential hazard. The warnings in this manual cover the most common potential hazards and are therefore not all-inclusive. If the user employs an operating procedure, an item of equipment or a method of working which is not specifically recommended by the manufacturer they must ensure that the product will not be damaged or made unsafe and that there is no risk to persons or property.

NEVER CHANGE ORIGINAL COMPONENTS WITH ALTERNATIVES.



Compressed Air Safety

Contact with quickly escaping air or bursting parts of the compressed air system can lead to serious injuries or even death.

- Do not exceed the maximum permitted pressure.
- Only use pressure rated installation materials and parts.
- Make sure hoses, tubes, fittings and air tools are in good condition and attached correctly.
- Ensure the system is not under pressure when performing repair & maintenance.



Electrical Safety

Contact with energised parts of the product, may lead to an electrical shock which can lead to serious injuries or even death. The user shall take all measures necessary to protect against electrical shock.

Follow regulations for electrical installations.

Do not use this product in explosive environments.

The system must be disconnected from any power supply during maintenance work.

Any electrical work on the system is to be performed by authorized personnel only.



Battery Safety

Only use accessories or chargers recommended by the manufacturer.

The built-in battery cannot be dismantled. Please contact the manufacturer for repair if necessary.

Transportation and Storage

The product should be transported and stored in its original packaging.

Make sure the product is stored at a temperature between -20°C to +45°C (-4°F to +113°F) and the humidity is <40%, no condensation.

Avoid direct UV and solar radiation during storage.

The manufacturer is not responsible for incidental damage caused by transportation or storage.

Cleaning

If you need to clean the product we recommend using a clean, dry cloth. For stubborn marks, use distilled water or isopropyl alcohol only.

Disposal



Electronic devices are recyclable material and do not belong in the household waste. The product, accessories and its packing material must be disposed according to local statutory requirements.

Introduction



Oil Vapour Monitor

Intended Use

CAA Sensors' Oil Vapour Monitor is suitable for use in manufacturing, pharmaceutical, industrial and base building environments providing the products specifications are met. This includes:

- The product is used in dry, non-corrosive and non-explosive gases e.g. air, oxygen, nitrogen
- Oil vapour range is between 0.001 to 5.000 mg/m³
- Gas pressure is between 0.3 to 17 bar (4.4 to 247 psi)
- Gas temperature is between 0°C to +50°C (32°F to +122°F)
- Power supply is between 96 to 264 vAC
- The product is not used in explosive areas.

Refer to the Specifications section (next page) for full requirements.

The oil vapour monitor measures oil vapor concentrations and simultaneously monitors pressure dewpoint, gas pressure, and gas temperature.

Oil Vapour Monitor

The Portable Oil Vapour Monitor does more than measure oil vapour. It also:

- monitors pressure dewpoint, pressure and gas temperature and
- gives the oil vapour class and moisture class based on the principles of ISO8573-3 and ISO8573-5.

The 7" touchscreen provides real-time information, data recording, and USB export (CSV format). With 25 GB of onboard storage, users can easily perform data analysis directly on the screen or download data to their computer for further analysis.

The device has excellent repeatability and stable performance. The automatic calibration and self-cleaning ensures reliable accuracy and extended sensor life.


The Portable Oil Vapour Monitor is easy to install via 6 mm PTFE tube and quick-connect tube fittings. Easy to move between sites.

Specifications

| Oil Vapour | | |
|-----------------|---|----------------------|
| Measuring Range | 0.001 to 5.000 mg/m ³ | |
| Accuracy | ±1.5%RD + 0.003 mg/m ³ | |
| Resolution | 0.001 | |
| Dew Point | | |
| Measuring Range | -110 to +20 °Ctd | 166°F to +68°F |
| Accuracy | ±2 °Ctd (-60 ... +20 °Ctd) ±3 °Ctd (-110 ... -60 °Ctd) | |
| Pressure | | |
| Measuring Range | 0 to 1.7 Mpa(a) | 0 to 246 psi |
| Accuracy | ±0.3 %FS @23°C | |
| Resolution | 0.01 | |
| Temperature | | |
| Measuring Range | 0 to +50 °C | 32°F to +122°F |
| Accuracy | ±0.3 °C | |
| Resolution | 0.01 | |
| Display | | |
| Display | 7" IPS touch LCD | |
| Display Options | 1280 × 800 px | |
| Data Logging | | |
| Storage | 25 GB | 3,000,000,000 values |
| Data Export | USB Type-C | |
| Signal Output | | |
| Analogue Output | 4-20mA | |

| | | |
|------------------------------|---|----------------|
| Digital Output | Modbus RTU (RS485) and Modbus TCP (Ethernet) | |
| Alarm Output | 2 × Relay alarm channel (Oil Vapor, Dewpoint) | |
| USB | USB Type-C | .csv format |
| Power | | |
| Supply Voltage & Power | 100 to 240 VAC Max 65 W | |
| Power Supply | Included | |
| Operating Environment | | |
| Measuring Medium | Compressed air and non-corrosive, non-explosive gases | |
| Medium Temperature | 0 to +50 °C | 32°F to +122°F |
| Medium Pressure | 0.3 to 1.7 Mpa(a) | 0 to 246 psi |
| Relative Humidity | 0 to 40 %RH (Non-condensing) @20°C, 100KPa | |
| Sample Gas Flow Rate | 0.5 to 2 NL/min | |
| Environment Temperature | -20 to +45 °C | -4 to +113°F |
| Storage Temperature | -20 to +45 °C | -4 to +113°F |
| Other | | |
| Zero Filter Life Time | 2 Year @ 2 ppm | |
| UV Lamp Life Time | 8,000 hours | |
| Case Material | Aluminium Alloy | |
| Dimensions | 445 × 319 × 177 mm (L×W×H) | |
| Weight | 10 kg | 22 pounds |
| Installation | Permanent or Temporary | |
| Warranty | 12 months | |

Dimensions

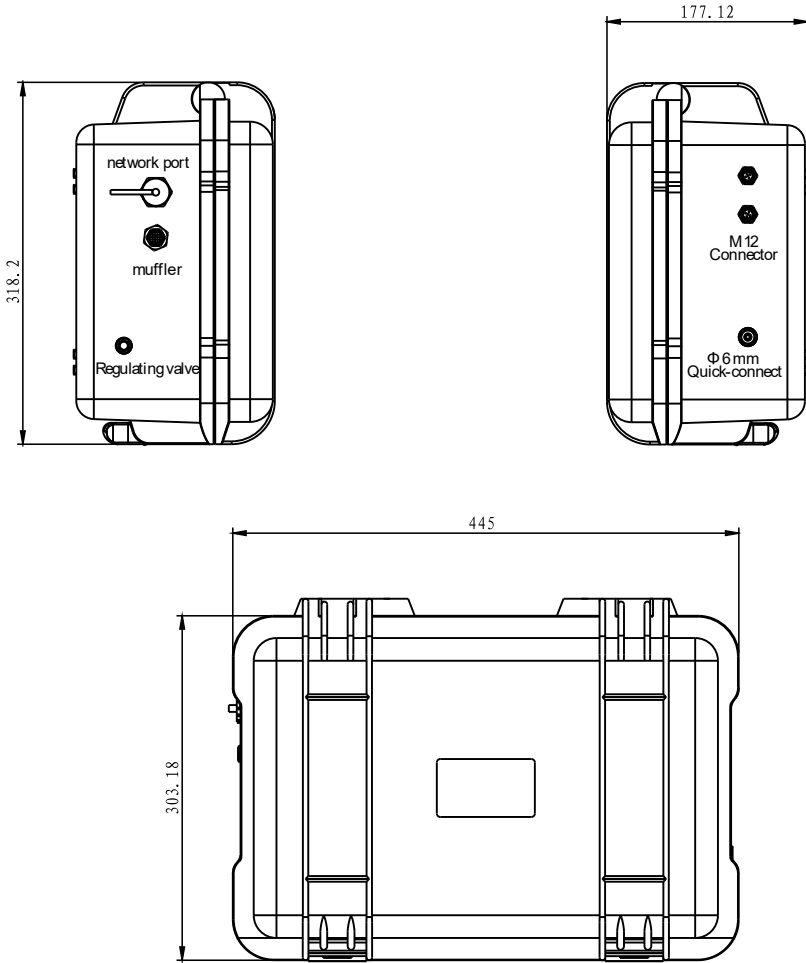

Oil Vapour Monitor Kit

The Oil Vapour Monitor Kit comes with:

- Oil Vapour Monitor
- 6mm Teflon Tube
- Power Cable
- Nitto Fittings
- 2 x M12 connectors



Oil Vapour Monitor



Nitto Fittings



M12 Connectors



Teflon Tube



Power Cable

Installation



Installation Overview

Mechanical Installation

Step 1 – Check for liquid oil or oil aerosols

Step 2 – Fit Oil Vapour Monitor

Electrical Installation

Step 3 – Connect the product to power

Step 4 – (Optional) Connect Communication and Alarm relays

Sensor Configuration

Step 5 – Set sensor settings

Tools and Equipment needed for installation



Clean, white
cloth

Installation – Mechanical



Notes:

- Refer to the **Notes and Warning** section at the start of this document for safety and product handling information.
- Before installing the product, make sure it is rated for your system (refer to the Specifications section).
- Do not use this product if liquid oil or oil aerosols are present.
- Do not use this product in explosive areas.
- This product is for indoor use only.

Step 1 – Check for liquid oil or oil aerosols

- Get a clean, white cloth
- On the gas sampling point, open the ball valve slightly
- Hold the cloth in the gas flow for 1 minute
- Close the ball valve
- Check the cloth for visible signs of oil.



If oil is present on the cloth, **do not** use the oil vapour monitor. Visible signs of oil indicate that the oil exceeds the products specifications.

- If no oil is visible on the cloth, proceed to Step 2.



Step 2 – Fit Oil Vapour Monitor

- Screw the quick connector (RC1/2" external thread) onto the pre-installed gas ball valve (G1/2" internal thread)
- Insert one end of the Teflon tube into the equipment's air inlet and the other end into the quick connector
- Connect the quick connect fittings
- Open the ball valve
- Slightly open the Control Valve (on the other side of the unit) until you feel gas being released from the outlet.




Installation – Electrical

Notes:

- Refer to the **Notes and Warning** section at the start of this document for safety and product handling information.


Step 3 – Connect the Oil Vapour Monitor to power

- Plug in the power cord into the Oil Vapour Monitor
- Turn on the power switch. The screen will light up.

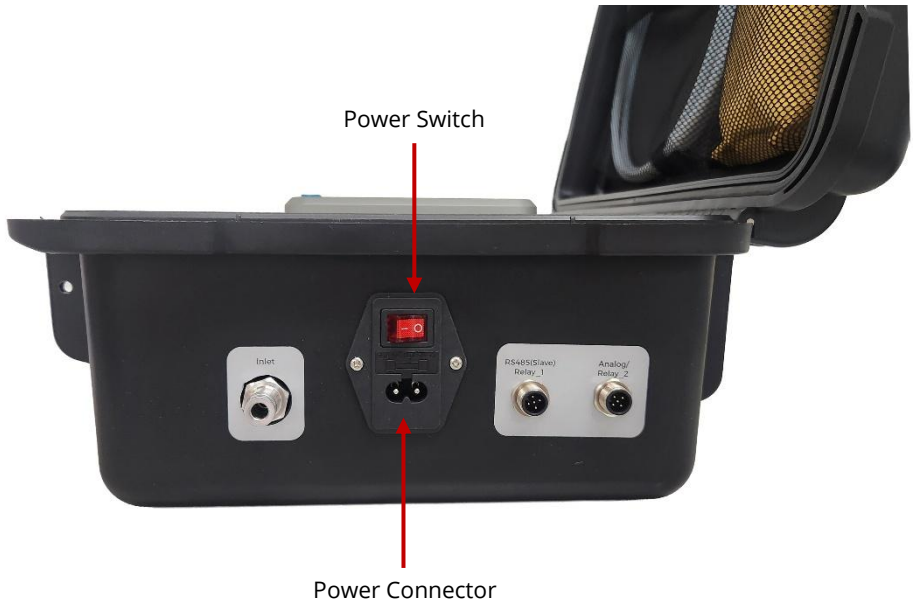

Step 4 – (Optional) Connect Communication & Alarm Relay

Do **not** screw the M12 connector using force, otherwise it may damage the connection pins.

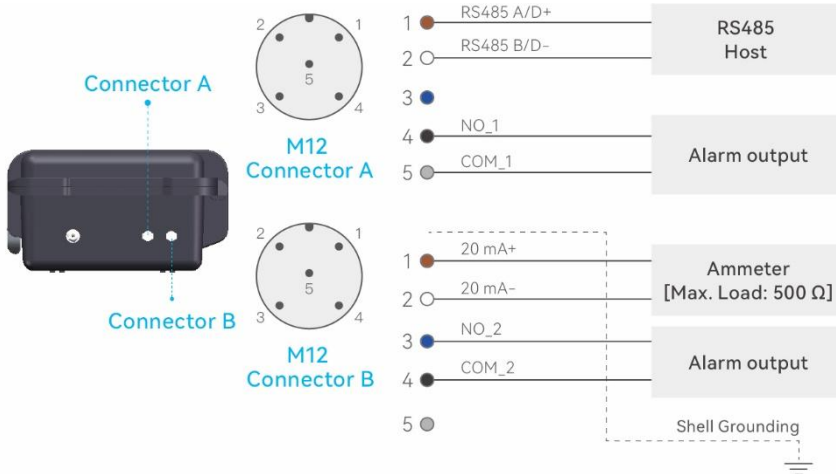

| Connector A (Modbus & Alarm 1) | | Cable Colour | Connector B (4-20mA & Alarm 2) | |
|--------------------------------|-------------------|--------------|--------------------------------|----------------|
| Pin 1 | RS845, Data + (A) | Brown | Pin 1 | 4-20mA + |
| Pin 2 | RS845, Data - (B) | White | Pin 2 | 4-20mA - |
| Pin 3 | N/A - Not Used | Blue | Pin 3 | NO 2 |
| Pin 4 | NO 1 | Black | Pin 4 | COM 2 |
| Pin 5 | COM 1 | Grey | Pin 5 | N/A - Not Used |

Operation



Functions

The Oil Vapour Monitor continuously samples gas for both oil vapour and moisture (dew point). The sample gas should be allowed to flow until a stable reading is achieved. This can be seen in the graph on the display. It is normal for the reading to fluctuate up and down slightly with changes in the operation of the gas being sampled, however the overall trend should show a level line on the graph.

Oil vapour measurements won't start until dew point is less than +10°C (+50°F)

To protect the oil vapour sensing unit the dew point must be below +10°C (+50°F). When first powering the device, the oil vapour sensing unit will be isolated from the gas supply until the dew point value has reached this minimum value. If the dew point is above +10°C (+50°F) an internal valve will remain closed and no gas will flow through the oil vapour sensing unit. No oil vapour value will be shown at this time. Once the minimum dew point value is reached the internal valve will open and gas will be supplied to the oil vapour sensing unit.


Self-cleaning / zero calibration test

When starting, stopping and periodically throughout the operation, the oil vapour sensing unit will automatically run a zeroing (self-cleaning) calibration test. The status is shown at the top of the screen with a percentage (%) indicator. This process should be allowed to complete prior to powering the unit off.

During the zeroing process either no value or the last value will be shown as the oil vapour level. This displayed value will be locked until the zeroing process is completed, any value shown during the zeroing process should not be used as the representative value of the gas being tested. On the graph, you will see a flat line with no variation during the zeroing process.

Once the zeroing process is completed, the gas will flow through the oil vapour sensing unit again, a new value will be displayed within 1-2 minutes, and the graph will start to show some variation in value. In some instances, particularly where the oil vapour content of the gas is very low, several zeroing processes may be required to achieve a stable reading. In this case, you will notice a step change in the oil vapour value shortly after each zeroing process has been completed. Only once the value remains consistent from one zeroing process to the next is the true value shown.

Measurement Process

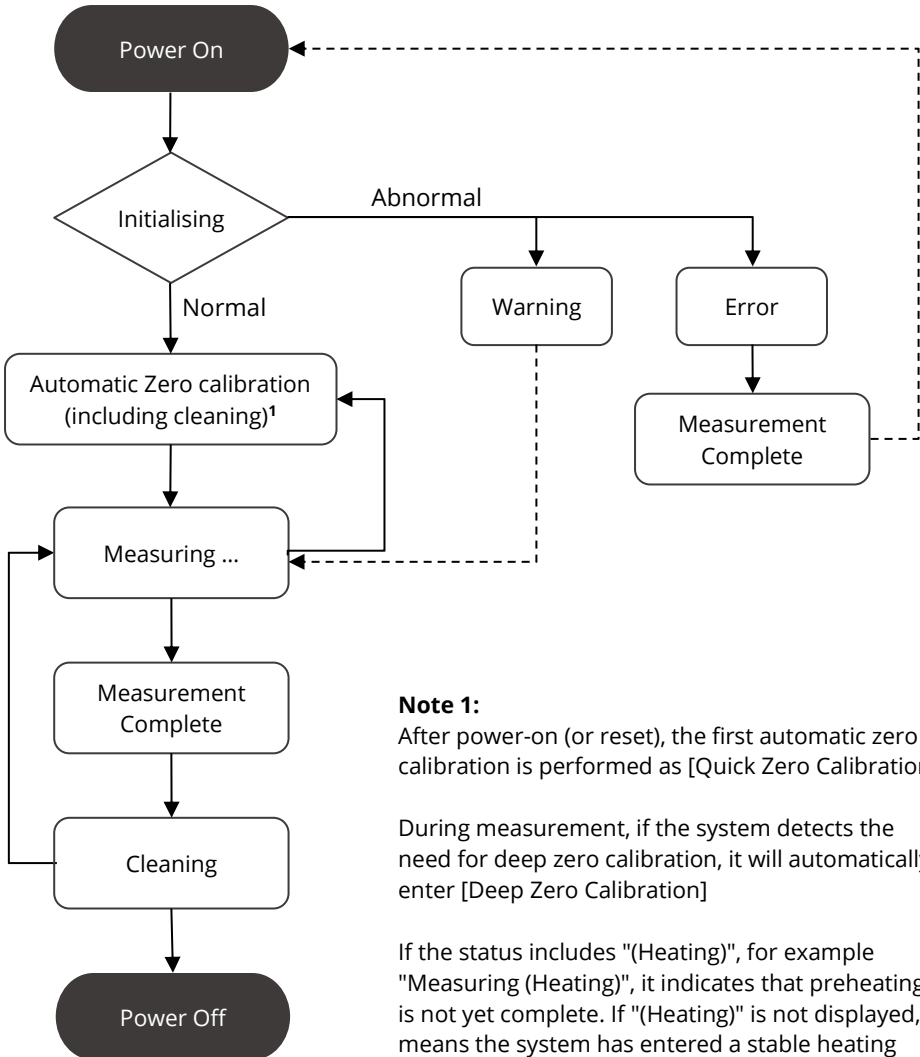

Note 1:


After power-on (or reset), the first automatic zero calibration is performed as [Quick Zero Calibration]

During measurement, if the system detects the need for deep zero calibration, it will automatically enter [Deep Zero Calibration]

If the status includes "(Heating)", for example "Measuring (Heating)", it indicates that preheating is not yet complete. If "(Heating)" is not displayed, it means the system has entered a stable heating state

LED Indicator

The Oil Vapour Monitor has a multi-coloured LED panel with the following functions.

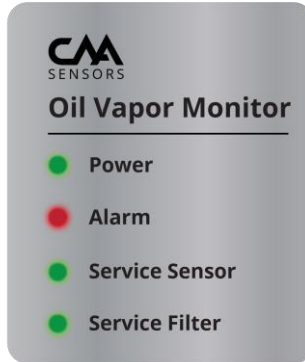


| LED | Function | LED Colour | Description |
|----------------|--|------------|---|
| Power | Indicates the power status | Green | Power supply is normal |
| | | Red | Power supply is abnormal |
| Alarm | Indicates the measurement environment status | Green | Measurement environment (pressure, temperature, internal communication) is normal |
| | | Red | Measurement environment (pressure, temperature, internal communication) is abnormal. Check the Alarm Screen for more information. |
| Service Sensor | Indicates whether the PID sensor needs to be serviced | Green | PID sensor status is normal |
| | | Red | PID sensor status is abnormal. Time for a service |
| Service Filter | Indicates whether the Zero Filter needs to be replaced | Green | Zero filter status is normal |
| | | Red | Zero filter status is abnormal. Time for a service |

Operation


Home Screen

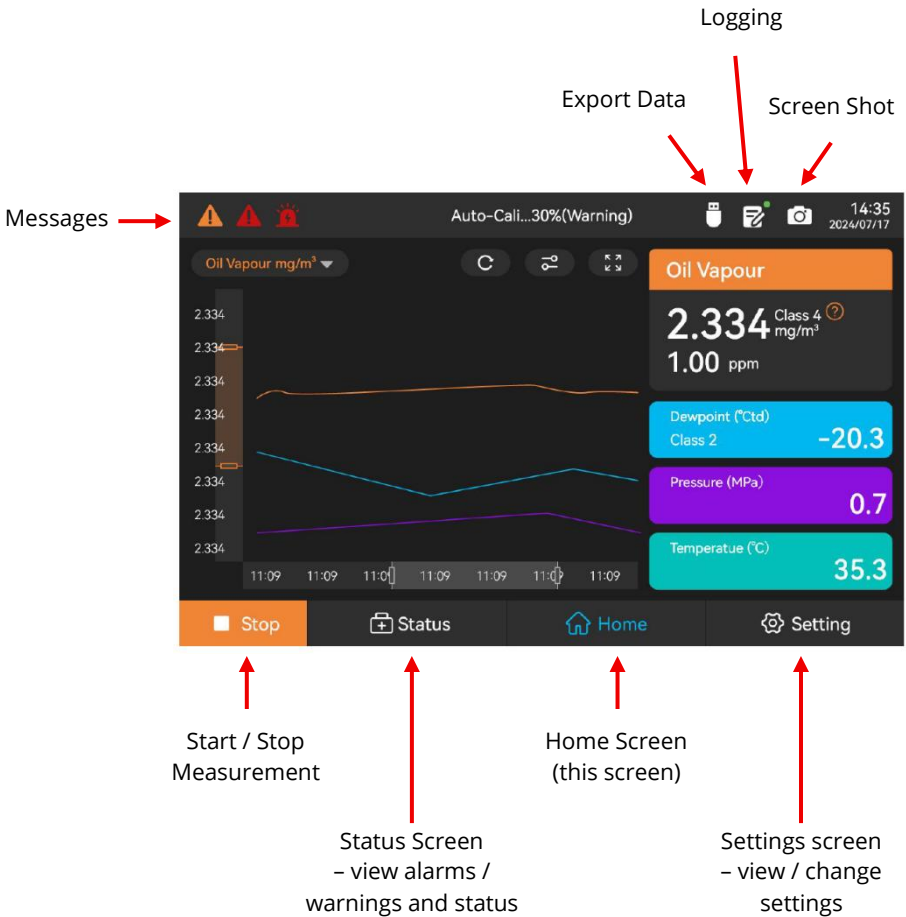


After the device is powered on successfully, the Home screen is displayed.



Messages

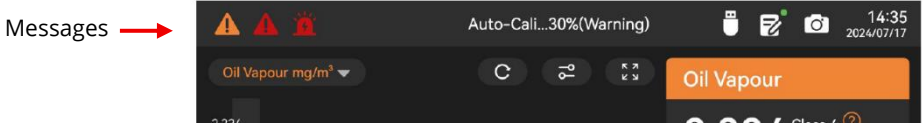On the Home screen, the top row will show any messages you need to be aware of.



| Message | Description |
|---|--|
|  Orange Status Warning | The measured values are for reference only and may not be accurate. Please check the [Status] page for details |
|  Red Status Warning | There is an issue with the measured values. Please check the [Status] page for details |
|  Red Alarm Icon | Alarm triggered. Please check the [Status] page for details |
| Initializing... 30% | Checks if the measurement environment meets the requirements |
| Zeroing (Warming)...30% | Starts warming up and zero calibration. The oil vapor values displayed are invalid during this phase |
| Measuring (Warming)... | Measuring, but warming is incomplete. The oil vapor values may not be accurate |
| Measuring... | Measuring with stable temperature. The oil vapor data is accurate and reliable. |
| Cleaning...30% | The device is running an auto self-cleaning or manual cleaning program. To ensure sensor life and accuracy, do not interrupt unless necessary |
| Stop (Warning) | When this message occurs, please check the [Status] page for the cause. The system will automatically start measurement once the issue is resolved |
| Stop (Error) | When this message occurs, please check the [Status] page for the cause. You must manually start measurement once the issue is resolved |

Home Screen

The Home screen displays:


- messages you need to be aware of
- measurement values
- ISO 8573-5 class for oil vapour
- ISO 8573- 3 class for moisture (dew point) and
- measurement graph.

Shows which units are displayed on the Y-Axis.
Press to change units

View measurement readings and
• ISO 8573-5 class for oil vapour and
• ISO 8573- 3 class for moisture (dew point)

Messages

Long press to add / remove measurement on graph

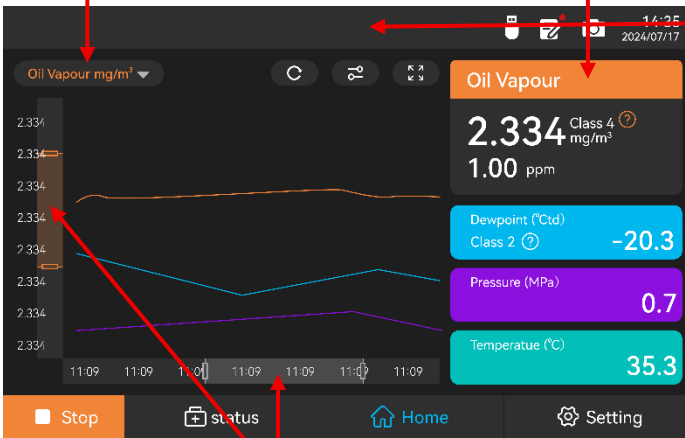

Use the bar to zoom in / out or change the range

Status Screen

The Status screen displays:

- the current operation of the unit (eg measuring)
- the contamination level of the PID sensor
- the remaining life of the zero filter (max lifetime of 2 years @ 2ppm)
- the remaining life of the UV lamp (max lifetime of 8000 h)
- duration of the current measurement program
- total operating hours and number of times the unit has been started
- warnings


| Status | | Warning | |
|--------------------------------|--------------|---------------------------|-------------------------|
| Current Operation | Measuring... | PID Sensor | |
| Total Operating Time | 10day | Pressure | 0.01 |
| Current Operating Time | 20 h | Main Board | |
| Startup Time | 5 | Dewpoint Sensor | |
| PID Sensor Contamination Level | Low | Temperature Sensor (0~30) | 28.93 °C |
| Filter Remaining Life Time | 1day | Dewpoint (<= -20) | 8.93 °Ctd |
| UV Lamp Life Time | 100day | Oil Vapour (0.001~2.001) | 1.931 mg/m ³ |

Start Status Home Setting

Setting Menu

On the Settings screen you can:

- View / change alarms
- View / change Fieldbus (Modbus) settings
- Start / stop the data logger
- View and download files and screenshots
- View change system settings:
 - Screen settings
 - Languages
 - Date and time
 - View system information
 - Restart the system

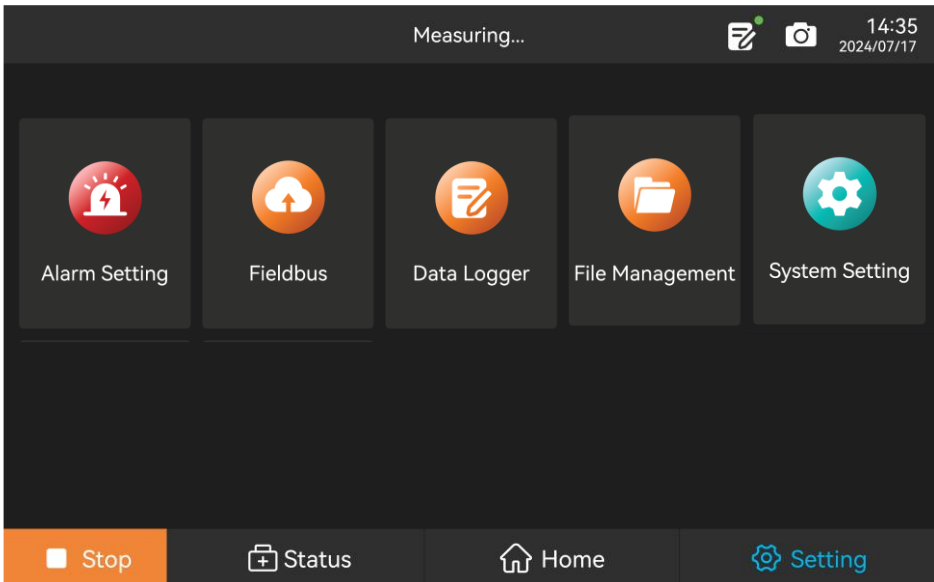

Turning Off the Unit



You must let the Oil Vapour monitor complete its cleaning cycle before you turn it off.

To turn off the unit:

- Stop the measurement
- Let the unit go through its cleaning cycle
- Then you can switch off power to the Oil Vapour Monitor.

Warranty



Warranty

CAA Sensors provides a 12-month warranty for all products. The warranty covers materials and workmanship under the stated operating conditions from the date of delivery. Please report any findings immediately and within the warranty time.

If faults occur during the warranty period CAA Sensors will repair or replace the defective unit, without charge for repair labour and material costs but there is a charge for other services such as labour to remove or reinstall the instrument, transport and packing. Warranty repairs do not extend the period of warranty.

The following damage is excluded from this warranty:

- Improper use and non-adherence to the user manual.
- Use of unsuitable accessories.
- External influences (e.g. damage caused by vibration, damage during transportation, excess heat or moisture).

The warranty is cancelled when one of the following situations occurs:

- The user opens the measurement instrument without a direct request written in this manual.

- Repairs or modifications are undertaken by third parties or unauthorised persons.
- The serial number has been changed, damaged or removed.

Other claims, especially damage occurring on the outside of the instrument (e.g. dents, marks), are not included unless responsibility is legally binding.


Calibration

The product is calibrated before delivery. The calibration date is printed on the certificate which is shipped with the product.

The Oil Vapour Monitor requires calibration to remain accurate. The frequency of calibration depends greatly on the level of contamination within your system.

We recommend you calibrate the product every year. Calibration is excluded from the product warranty. For more information, contact CAA Sensors:

- Phone: +61 494095632
- WhatsApp: +61 494095632
- E-mail: sales@caasensors.com

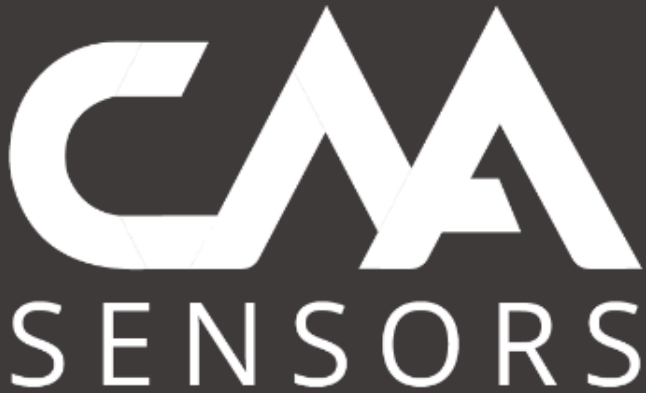

CAA Sensors Pty Ltd

Address: 2/7 Narabang Way, Belrose NSW 2085, Australia

Phone / WhatsApp: +61 494 095 632

E-mail: sales@caasensors.com

Website: www.caasensors.com